




# How to Adjust Black and Decker TR1278B Browning Dial

This guide will show how to adjust the browning dial in a Black and Decker TR1278B toaster.

Written By: Dominic Gamonez

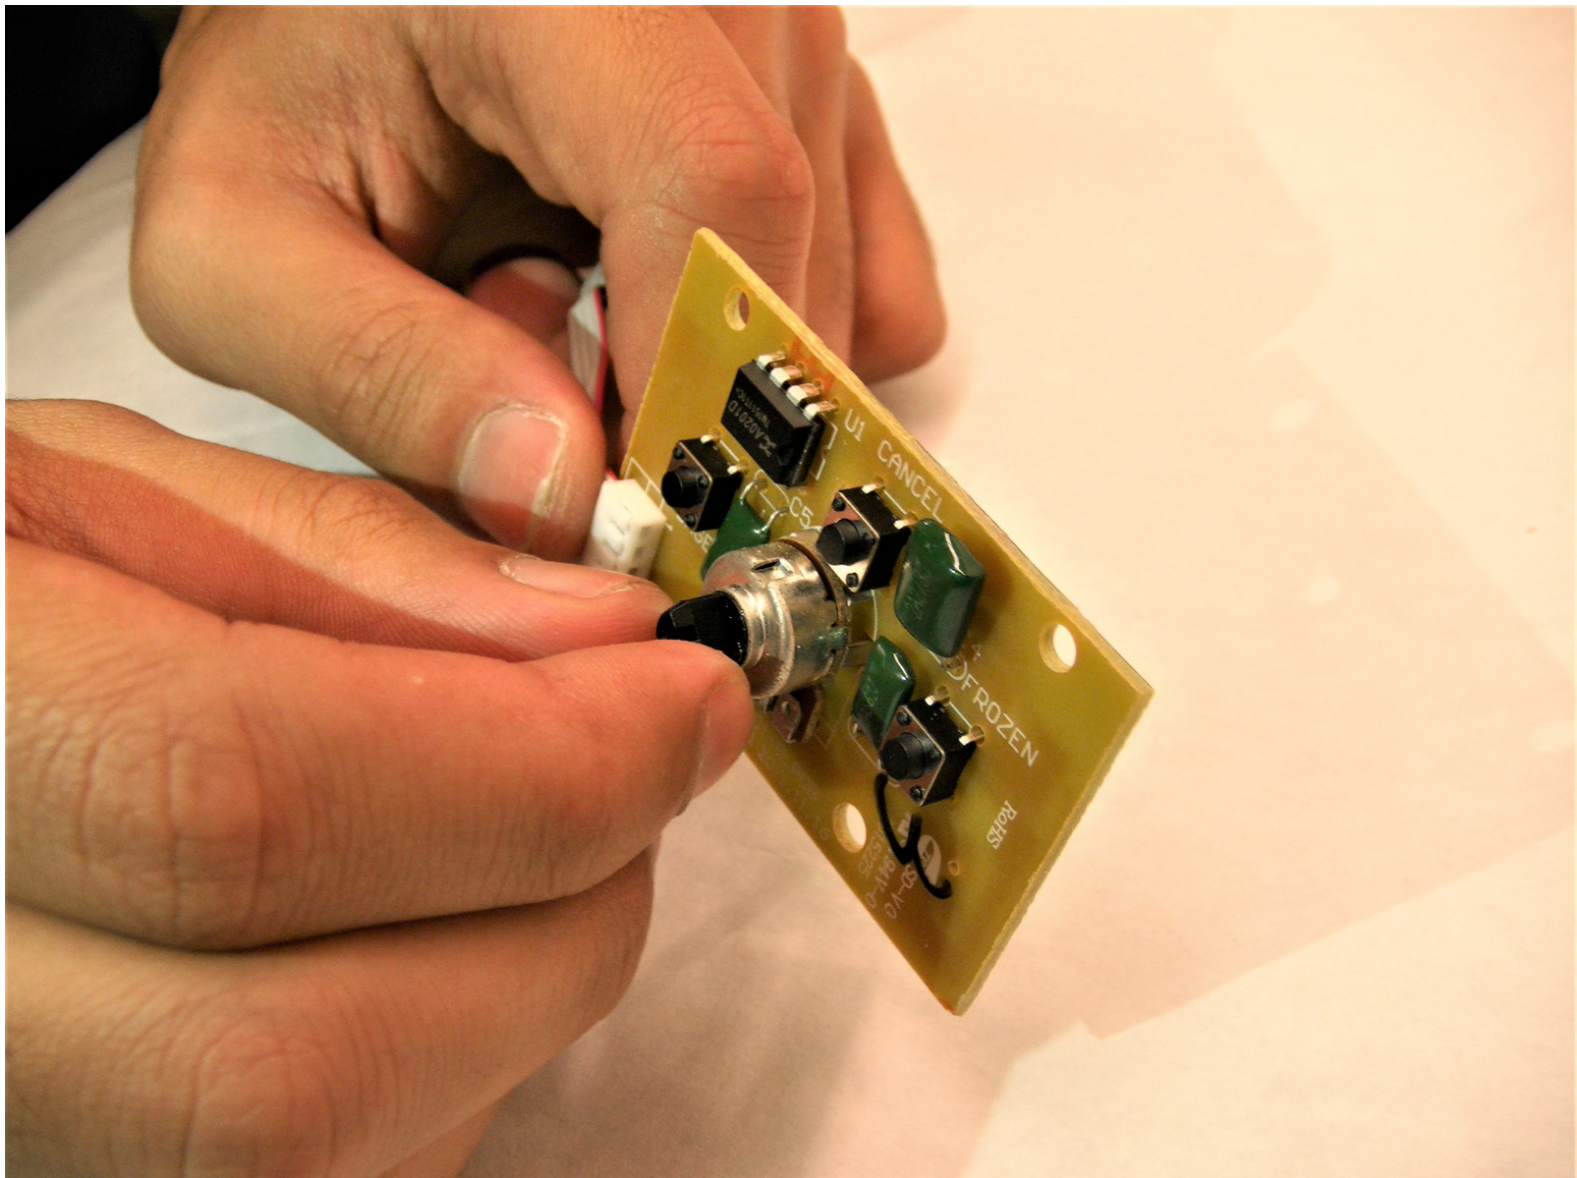

## INTRODUCTION

This guide will show how to adjust the browning dial in a Black and Decker TR1278B toaster.

---



### TOOLS:

- [Phillips #2 Screwdriver](#) (1)
  - [iFixit Opening Tools](#) (1)
-

## Step 1 — Top Cover



- ❗ Unplug the toaster before disassembly.
- Remove the carriage lever by pulling it away from the toaster.


## Step 2



- ❗ Toaster will be turned upside down. Clear crumb tray or work over a paper towel.
- Turn the toaster upside down.
- Unscrew all four 4mm screws on the bottom using a Phillip's head #2 (PH2) screwdriver.



### Step 3

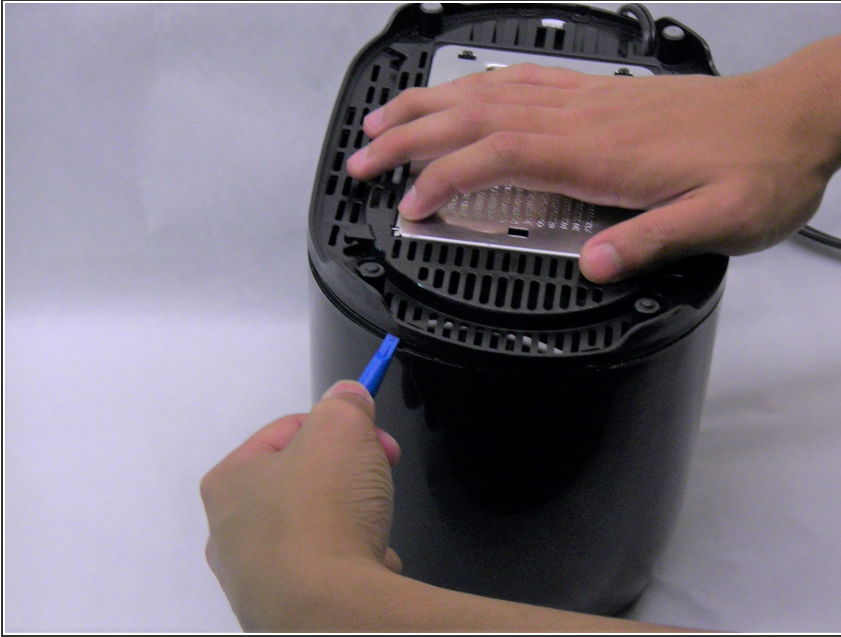


- Detach the bottom from the front cover using the plastic opening tool.

### Step 4





- Turn the toaster right side up.
- ⚠ Support the bottom. The ribbon cable that connects the toaster to the front cover can be damaged.
- Lift the front cover.
- ⚠ Lift carefully. Again the ribbon cable can be damaged.

## Step 5

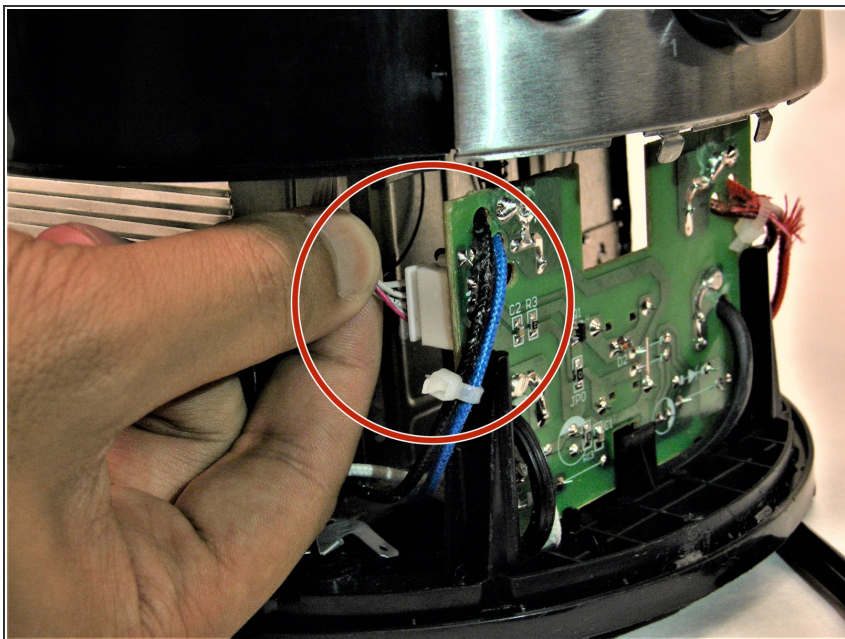

- Detach the bundled cable connector from the toaster by carefully pulling it away from the circuit board.



## Step 6 — How to Adjust Black and Decker TR1278B Browning Dial

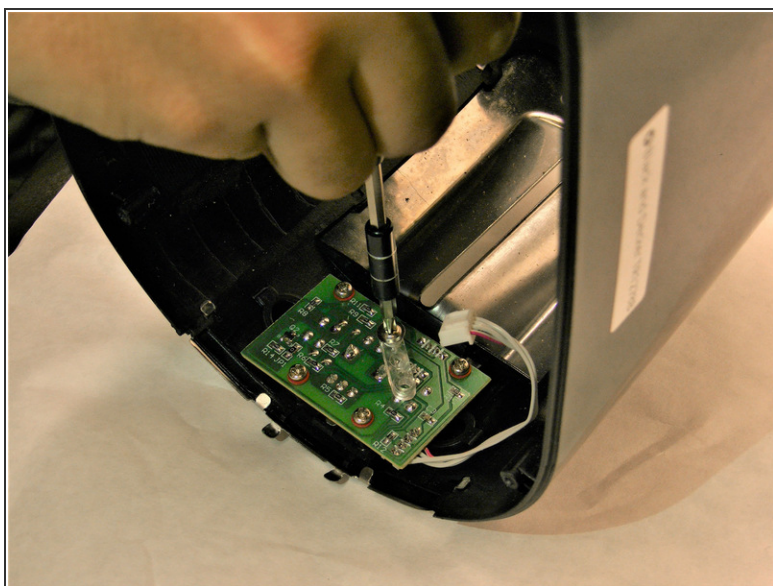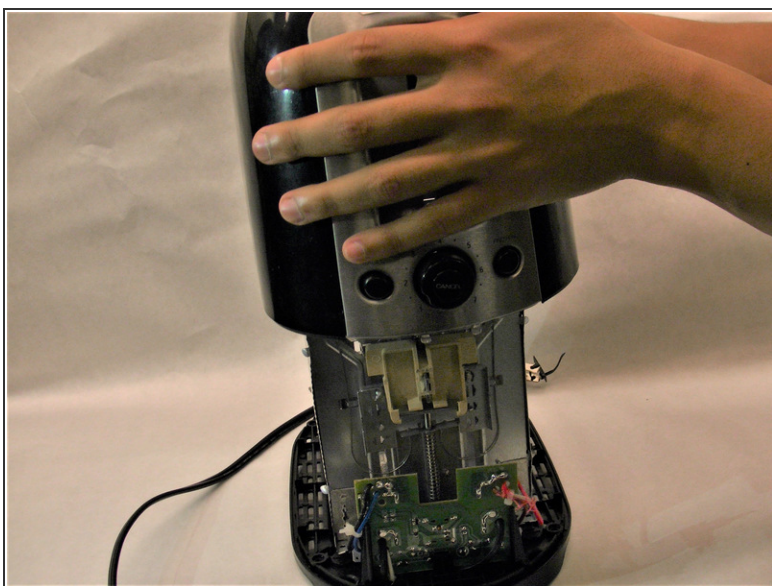

- Remove the front cover.




## Step 7

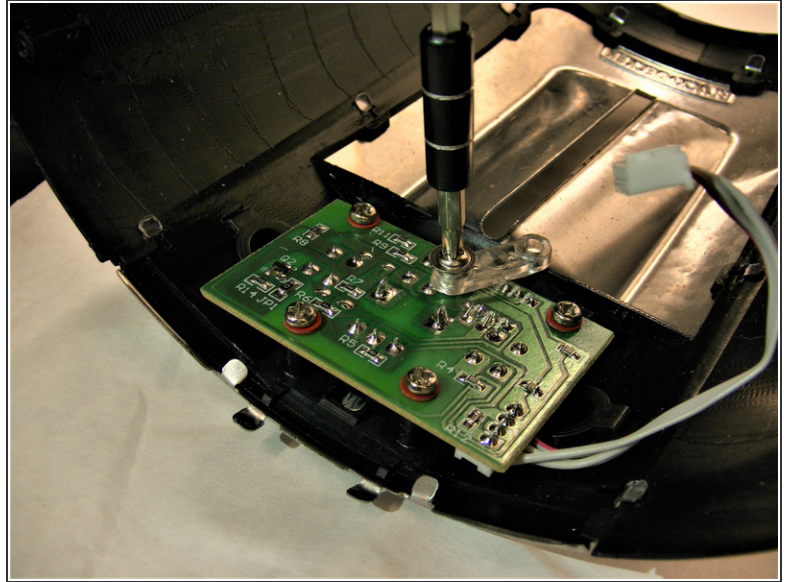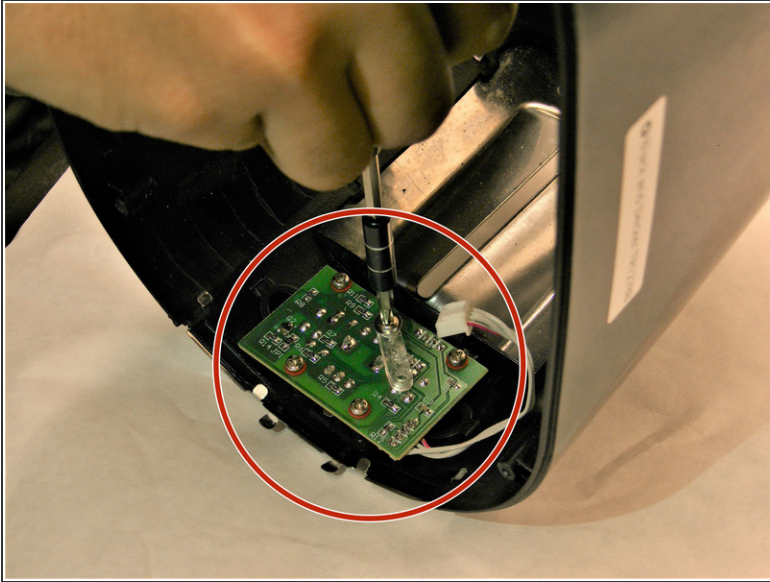

- Unscrew the circuit behind the browning dial on the front cover.

⚠ Do not lose the washers on the screws.


## Step 8

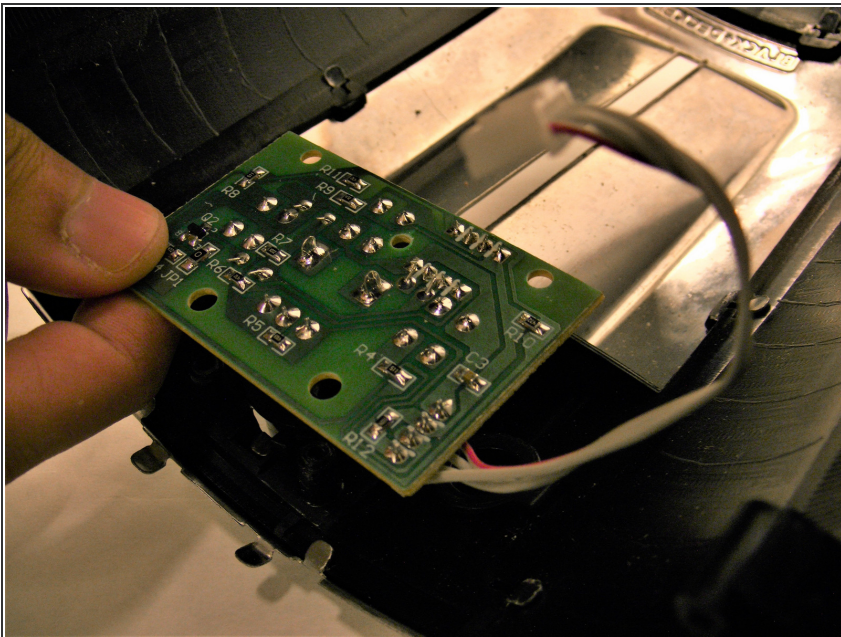

- Remove the circuit.

⚠ The dial and buttons on the front cover will be loose.

## Step 9

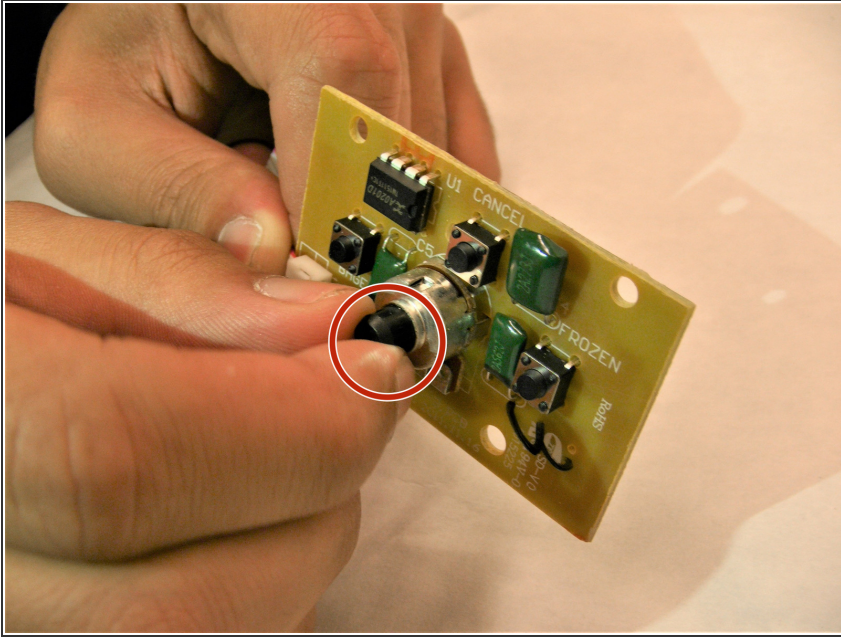

- Turn the knob on the circuit board left or right to adjust the browning dial.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-07-08 03:42:50 AM.